

What to do if...
What to do if...

	A tire punctures	P. 358	If you have a flat tire
	The engine does not start	P. 366	If the engine will not start
		P. 54	Engine immobilizer system
		P. 369	If the battery is discharged
	The shift lever cannot be moved out	P. 367	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 375	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 368	If you lose your keys
	The battery runs out	P. 372	If the battery is discharged
	The doors cannot be locked	P. 19	Doors
	The horn begins to sound	P. 56	Alarm
	The vehicle is stuck in mud or sand	P. 377	If the vehicle becomes stuck



The warning light or indicator light comes on

P. 339

If the warning light turns on



nWarning lights



Brake system warning light

or



P. 339



Malfunction indicator lamp



P. 340



"ABS" warning light

or



P. 340



Driver's seat belt reminder light

P. 341



Front passenger's seat belt reminder light

P. 341



Low fuel level warning light

P. 341



Master warning light

P. 341



SRS warning light

P. 340



Electric power steering warning light

P. 340



Open door warning light

P. 341



Pre-collision safety system warning light

P. 340



Charging system warning light

P. 340



Low tire pressure warning light

P. 341



The warning message is displayed

P. 344

If the warning message is displayed